
## **IMPORTANT SAFETY NOTES**




ALWAYS READ THE INSTRUCTIONS BEFORE USING PODIUM



NEVER USE A PODIUM WITH DAMAGED OR MISSING COMPONENTS




**NEVER OVERREACH** 

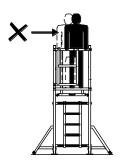


NEVER HAVE MORE THAN ONE PERSON ON THE PLATFORM



OR SLOPING SM PLANT & TOOL HIRE CENTRES LTD

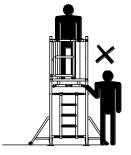

DO NOT MOVE PODIUM IF A

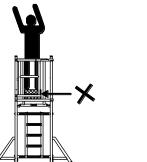


NEVER USE BOXES FOR EXTRA HEIGHT, STAND ONLY ON THE PLATFORM




020 8850 5658

NEVER USE PODIUMS AS A MEANS OF ACCESS TO ANOTHER PLACE.

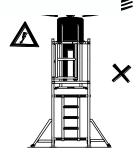

NEVER USE PODIUMS NEAR ELECTRICAL POWER LINES

## BE AWARE OF THE FOLLOWING:-



- B. NEVER STAND ON THE ACCESS LADDER TO WORK.
- C. WORKING PLATFORM MUST BE LEVEL.
- D. INSPECT BEFORE USE.
- E. ONLY ASCEND OR DESCEND THE LLWP USING THE ACCESS PROVIDED.
- F. FACE THE FOLDING BACK SECTION WHEN ASCENDING OR DESCENDING.
- G. ENSURE THE GATE IS CLOSED AND LOCKED BEFORE USE.
- H. BEWARE OF FINGER TRAPS.
- J. TO MOVE UNIT UNLOCK GATE AND DISMOUNT, UNLOCK CASTORS AND RE-LOCATE.
- K. IF IN DOUBT DO NOT GUESS CONSULT YOUR SUPPLIER.
- L. SEE OVERLEAF FOR COMPONENT CHECKLIST

## 1250 AND PAS 250 1250 PODIUM **UNIT ASSEMBLY GUIDE**



Dimensions — Platform at 1.25M x Width -0.65M x Depth 1.3M

Working Height— 2.25M (Max)

Dimensions — Folded Height –2.26M x Width - 0.25M x Depth - 1.3M

Weight— 33Kg Safe Working Load - 150kg

PAS 250— 36Kg(Mini Stabilisers)

PAS 250— 39Kg(Std Stabiliisers )

Manufactured under an ISO9001:2008 Quality System

Complies fully with the Working at Height Regulations 2005 and PAS250 Specifications

Lightweight all Aluminium Construction



PSM PLANT & TOOL HIRE CENTRES LTD 020 8850 5658 info@psmhire.co.uk www.psmhire.co.uk



ALWAYS LOCK ALL CASTORS WHEN PODIUM IS SITED, AND BEFORE USE.

## 1250 AND PAS 250 1250 PODIUM UNIT ASSEMBLY GUIDE



1 X FOLDING FRAME 1 X PLATFORM 1 X LADDER 2 X STABILISER( MINI OR STANDARD)(FOR PAS 250 COMPLIANCE)



2) OPEN FRAME AND LOCK MECHANISM



3) FIT PLATFORM AT CORRECT HEIGHT



4) POSITION UNIT AND LOCK CASTORS



5) CLIP UPPER BRACE OF LADDER ABOVE RINGS ON VERTICALS WITH ASSEM-BLED HOOKS AT TOP



6) FIT STABILISERS TO BACK VERTICALS (FOR PAS 250 COMPLIANCE)



7) USE LADDER TO ACCESS PLATFORM



8) CLOSE AND LOCK GATE