A38E ELECTRIC ARTICULATED BOOM LIFT



- Popular electric articulated boom lift
- Lightweight, durable and reliable
- Smooth, easy to use controls
- Compact chassis for excellent manoeuvrability
- Suitable for indoor and outdoor use



ELECTRIC ARTICULATED BOOM LIFT

A38E DIMENSIONS Max. working height 13.5m 11.5m Max. platform height (A) Max. working outreach 6.1m Clearance height at max. outreach 5.4m Platform size (**E x F**) 0.69m x 1.11m Overall width (B) 1.50m Overall length (C) 4.1m Stowed height (D) 2.0m Ground clearance 120mm

PERFORMANCE	
Platform capacity (SWL)	215kg
Max. drive height	11.5m
Max. wind speed	12.5m/s
Max. drive speed (stowed)	4.0km/h
Max. drive speed (elevated)	0.65km/h
Platform rotation	90° (+45°/-45°)
Turret rotation (non-continuous)	360°
Tailswing (riser boom elevated)	Om
Tailswing (riser boom stowed)	1.4m
Raise/lower time	83/68 sec
Gradeability	36%
Inside turning radius	1.12m
Outside turning radius	2.4m
Tyres	22 x 9 16 non-marking rubber
Controls	proportional controls
Drive system	direct drive DC

POWER

Power source


WEIGHT Weight


netres

CE Specification

© Snorkel 2018

WORKING ENVELOPE

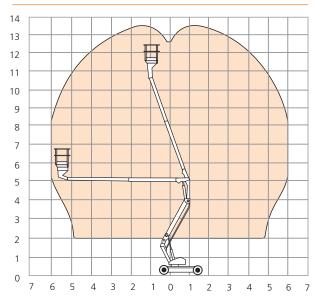

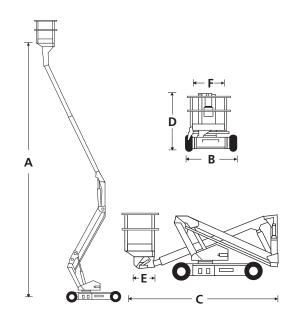

A38E

STANDARD FEATURES

- Snorkel Guard[™] secondary guarding system
- Proportional one-handed controls
- Hydraulic platform rotation
- Minimal front boom overhang
- Ultra-tight inside turning radius
- Power line to platform
- Tilt alarm and cut-out
- 2 person + equipment capacity indoor
- 1 person + equipment capacity outdoor
- Direct DC drive parallel wired wheel motors
- Non-marking tyres
- Duplicate boom controls at ground level
- Hour meter & on-board diagnostics display
- 2 year parts & labour, 5 year structural warranty
- CE approved

OPTIONS

8 x 6V, 220Ah batteries

3,795kg

- Special paint colours
- Flashing amber light
- Environmental hydraulic oil
- Upper control panel cover



Vigo Centre, Birtley Road, Washington, Tyne & Wear, NE38 9DA, U.K.

> t: +44 (0) 845 1550 057 e: sales@snorkellifts.com

Specifications subject to change without notice. Photos and diagrams in this brochure are for promotional purposes only. Refer to appropriate Snorkel operators manual for detailed instructions on the proper use and maintenance.